



High Precision Heat Alarm

CODE: QFS-ELCON10-IH

Elite Series

Interlinkable



Features

- Mains powered with 10yr sealed standby battery
- Interlink via hardwire
- RF interlinkable (optional)
- Compliant with BS5446-2:2003
- Alarm sounder (85dB)



GONEGT+

Specification	QFS-ELCON10-IH
Power	100-240V; 50-60Hz (with 3V battery)
Alarm Volume	>85dB (A) at 3m
Alarm Sensitivity	54°C to 65°C
Silence Time (Mute)	8 minutes
Compliance Standard	BS 5446-2:2003
Local Heat Alarm Sound Pattern	ISO8201; (Beep 0.5s > Pause 0.5s > Beep 0.5s > Pause 0.5s > Beep 0.5s > Pause 1.5s; Accompanied by red LED flash) [repeat]
Wired Alarm Sound Pattern	Two beeps > Pause 1.2s; Accompanied by red LED Flash [repeat]
Maximum Interlinked Devices	x40 devices
Maximum Wired Devices	x24 devices
Operating Environment	0~40°C ≤ 93%RH non-condensation.
Product Size	φ140×61.3mm.
Net Weight	268g (with battery)
Environmental Standards	RoHS & REACH

QVIS®

LIGHTING & SECURITY



 
High Precision Heat Alarm

CODE: QFS-ELCON10-IH

Interlinkable

Elite Series

Functions

Normal	Red LED flashes once (48 seconds); Green LED is always on	 48 
Fault	Buzzer sound every 48 seconds	
Low Power	Buzzer sound every 48 seconds	
Alarm	Pulsating buzzer; Accompanied by red LED flashing every 1 second	     
Mute	Silent buzzer; Red LED flash every 10 seconds for 8 minutes	 10  8min
Test	Imitates LED & buzzer pattern as per 'Alarm Mode'	    1

WARNING

When the power is low, or service life reaches 10 years, the alarm should be replaced. In any doubt, an alarm trigger should be assumed to be due to a fire and appropriate measures must be taken immediately.



High Precision Heat Alarm

CODE: QFS-ELCON10-IH

Interlinkable



Elite Series

Hardwired Install & Device Linking

1) Prepare Wires	Strip the live, neutral and interconnect (if connecting other devices) wires as per diagram shown below
2) Terminals	As per diagram, connect the wires to corresponding terminals and ensure terminal screws are properly tightened. Close the terminal cover to avoid contact with live terminals
3) Connect Devices	Devices must be linked together using the interconnect wire
4) Clip to Base	If base is screwed to the ceiling and a battery is installed, the alarms should clip on (this will not work without battery)
5) Testing	A test should be initiated before use (see previous page)

Connect Wires

Wire Stripping

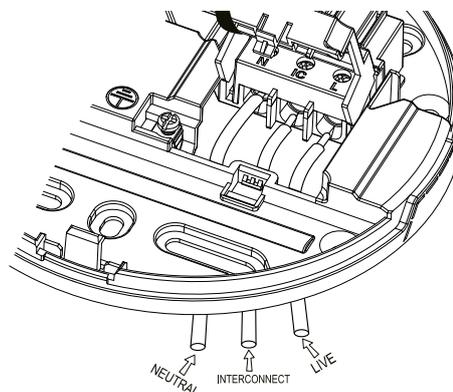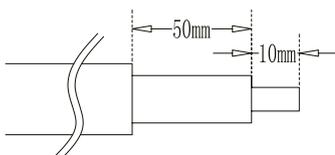

Close Terminal

